

Searching by Title

- Display the Guide
- Display Title Search




- Highlight a letter
- Enter a letter (a letter appears in the Title bar)

Continue typing until your title appears in the Title List

- Press until Title List is active
- Highlight a title
- Display the title option box

Set a Timer

- Highlight a timer option
- Set timer recurrence
- Accept and continue

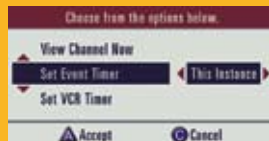

Using the QuickMenu™

- Display QuickMenu (if available)
- Scroll through categories of shortcuts and premium services
- Highlight a shortcut on the list
- Select a shortcut on the list




Access Video On Demand from the QuickMenu

- Display the Quick Menu
- Scroll to the VOD category
- Highlight the VOD shortcut
- Display VOD Channel

Use this button (if available on your remote) to go to the VOD channel

Follow the screen prompts to select and purchase a VOD offering

Understanding Your Remote Control

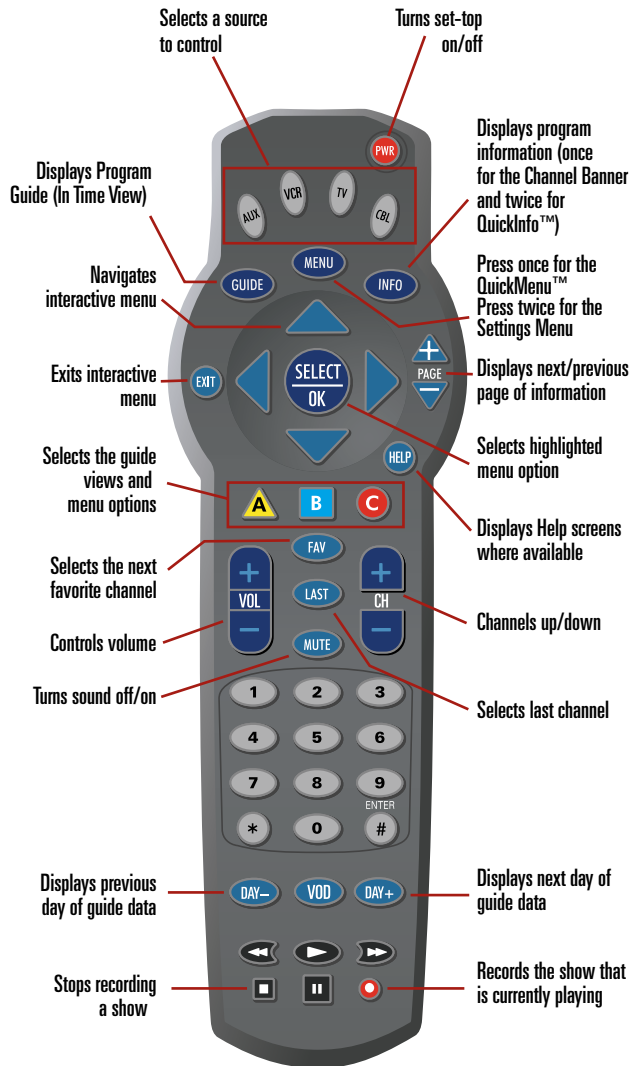

Note: Your remote control may appear different from the one shown in this guide.

All screen designs © 2005 Aptiv Digital, Inc.

Using Your Remote Control

Quick Tips Guide



PASSPORT DCT™

Version 2.7



BAJA
Broadband

Browsing for Shows


- Display the Channel Banner
- Browse by time (Hold to speed scroll)
- Browse by channel (Hold to speed scroll)
- Twice to display QuickInfo™ for extended program information
- Display more pages of information
- View selected program



Using the Guide

Find Shows By Time

- Display the Guide
- Browse by time
- Browse by channels
- Enter a channel number
- Scroll channels a page at a time (Hold to speed scroll)

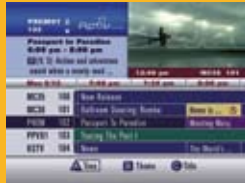


Find Shows By Theme

- Display Theme
- Scroll a page at a time
- Highlight a desired theme
- Display Programs list
- Highlight a program
- View selected program



Use Theme to buy PPV events

- Highlight theme: Pay Per View
- Display Programs list
- Highlight a future PPV program
- Display a title description
- Display the Purchase options
- Highlight an option
- Accept and continue

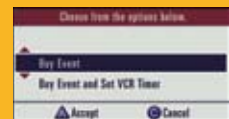

PIN entry is required when the Purchasing setting is set to "Restricted"

Using the Settings Menu

- Press twice: Display Settings Menu (Press only once if the QuickMenu is not available)



Setting Up Your Skipped Channels List

Channels that are marked as skipped will not display when using the channel up and down buttons

- Highlight Skipped Channels
- Display Channels list
- Highlight a channel
- Add or remove from the Skipped Channels list
- Return to the Preference list



Setting Up Your Favorite Channels List

- View your Favorite Channels by pressing the Favorite button
- Highlight Favorite Channels
- Display Channels list
- Highlight a channel
- Add or remove from the Current Favorites list



Settings Menu: Parental Control

Establish a PIN Number

- Highlight Parental Control
 - Display Initial PIN Setup
- Follow the onscreen prompt to establish your PIN



Require a PIN to Purchase Shows

- Highlight Purchasing
- Display the Setting list



This option is independent of Parental Control Locking options

Require a PIN to Purchase Shows (cont.)

- Highlight PIN Required
- Select PIN Required
- Return to Option list



Activate Parental Control Settings

- Highlight Locking
- Display the Setting list
- Highlight On
- Select On



Require a PIN to View Shows By Rating

- Highlight Lock Ratings
- Display the Rating list
- Highlight a rating
- Lock the rating and all higher ratings



Require a PIN to View Shows By Channel

- Highlight Lock Channels
- Display the Channels list
- Highlight a channel
- Lock or unlock a channel



Require a PIN to View Shows By Time

- Highlight Lock Time
- Display the Start list
- Highlight a start time
- Select a start time; display End list
- Highlight an end time
- Select an end time



Use the Lock Titles option to:
Hide NC-17 and NR(Adult) rated titles and
Require a PIN to view like rated shows